



To control the motor:

Apply 0-10 VDC between GND and "control voltage"

Connect "+" and "-" of either DIRECTION A or DIRECTION B.

TITLE: High Power Motor Control	
Document Number:	REV:
Date: 13/08/2011 23:13:12	Sheet: 1/1